Mobile phone Alarm push function manual

Now the alarm push function can only be used when access devices by cloud ID.

1 Log in JFeye APP by cloud.

This manual will only make motion detect as example.

2 Setting on the device

2.1 Enable Mobile reported in Event->Motion Detect as below.



2.2 Go to System->NetService to enable three items.

Ve			Ø	X	
JF TECH	Record	Event	System	Advanced	Info
🖗 General	NetService	Net	Server Info		
Gr ochora	PPPoE	0:			
Z Encode	NTP	0: N	ITP:60		
	EMAIL	1:s	mtp.mail.yahoo	o.com:465	
Network	IP FILTER	0:::	0:0		
	DDNS	DDI	NS Set Invalid		
WetService	FTP	0: F	TP		
	ARSP				
	AlarmServer	1: A	larmServer		
- R\$232	Wireless Contig	Not	enabled		
L 110202	Wifi	Not	enabled		
- RS485 Device	RTSP	1:5	54		
	Cloud	Cor	nected		
C Tour	Mobile reported	Ena	ıble		
🖍 IPC param.					
			ок	Cancel	Apply

2.2.1 Enable AlarmServer as below,

	NetService > Al	armServer		
	Protocol Type Enable Server Name Port Alarm report Log report	GENERAL V AlarmServer]	
			ОК	Cancel
2.2.2 Enal	ole Cloud as below,			
	NetService > C	loud		
	Enable 🗹 MTU 1280	Byte		
			ок	Cancel
2.2.3 Enal	ole Mobile Reported	as below,		
	NetService > Mob	ile reported		
	Enable 🖌			
			OK	Cancel "

2.3 Go to System->Network, set DNS as 114.144.114.114 and 8.8.8.8 as below.

JF TECH	Record	Event	System	Advanced	Info
ⓒ General	Net Card	Wire Netcard		Enable	
Z Encode	IP Address Subnet Mask	192 · 168 · 255 · 255 ·	19 · 242 255 · 0		
@ Network	Gateway	192 · 168 ·	19 . 1		
MetService	Primary DNS Secondary DNS	114 · 114 · 8 · 8 ·	114 · 114 8 · 8		
	TCP Port	34567			•
	HTTP Port HS Download	80			
RS485 Device	Transfer Policy	Quality Preferre	•		
🕞 Tour					
🖍 IPC param.			ОК	Cancel	Apply

2.4 Go to Info->Version to check if the Nat status of your device is connected.

3 Setting in

Ve				K	
JF TECH	Record	Event	System	Advanced	Info
(,) HDD Info	Record Channel	8	5453 40004 43		
III BPS	Build Date	2016-12-06 16:3	9:27	0000.00000	
🛛 LOG	MAC SerialNo	0012169203be f6e9fec5669cdc	15b		
<u>∱</u> Version	Status	88			
	Nat status code	2:123.59.14.6/1/	+001		ок

3.1 Enable Notifications as below and go to Jfeye->Alarm Push to enable your device.

JFeye Notifications	Main Menu	D Push Settings
	DeviceList	
Allow Notifications	Local Record	f6e9fec5669cdd5b
	Local Album	
Show in Notification Center	Alarm Push	
Sounds	Local Settings	_
Badge App Icon		
Show on Lock Screen		
Show alerts on the lock screen, and in Notification Center when it is accessed from the lock screen.	Logout	
ALERT STYLE WHEN UNLOCKED		
None Banners Alerts	-	

4 Check the alarm push.

4.1 Click your device in white area as below. When trigger motion detect, you will get alarm push message as pic 2 shows.

Push Settings	D Push Settings
f6e9fec5669cdd5b	2016-12-09 17:34:31 VideoMotion Start
	2016-12-09 16:41:29 VideoMotion Start
	2016-12-09 16:38:56 VideoMotion Start
	2016-12-09 16:38:10 VideoMotion Start
	2016-12-09 16:36:41 VideoMotion Start
	2016-12-09 16:35:01 VideoMotion Start
	2016-12-09 15:26:21 VideoMotion Start

4.2 You mobile phone will get alram push as below.

