How To Get Device Version Information?

1. Local view of equipment


Click on the order: The Main Menu \rightarrow Info \rightarrow Version

JE TECH		\odot	()	X		
[] HDD Info	Record	Event V4.03.R11.E15A720B.11	System	Advanced	Info	
t BPS	System Build Date	2019-08-21 17:26:42	201.142200.0000004			
🛙 LOG	Original MAC	0 001217a669b6				
▲ Version	Serial Number Record Channel	f039f8dd90a14c8b 8			20 -	
	Status Nat status Nat status code	841 Probing DNS 0:J0/+111		Ser	al Number	
					ок	
系统版本 V4.0 19位数字的含义: XXX XX XX		5.12201.130700 X X X X X X	onvif) 高级智 初级智 云服身 编译目 GUI网	型 2 3 法型 3 3 球空 4 客户端协议 5 服务端协议 6 3 能分析 7 3 能分析 8		
4:Update so 5:onvif cli 6:onvif sen 7:Advanced 8:primary 5 9:cloud sen 10:Compile 11:GUI styl	fication code typ equence number ient agreenment rvice agreenment intelligent analy rvice directory number	ysis rsis	The fol figure similar	shows		

2. Browser View

To access IP address for example, cloud site access operation agreement

Click on the order: DeviceCfg \rightarrow Setting \rightarrow Version

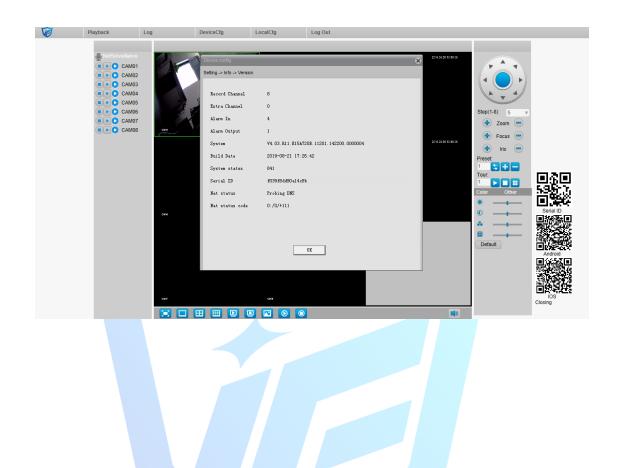

JF TECH