How to switch the channel mode?

ADVR AHC camera image, you need to check the video channel mode

 Click on the preview screen in order :Main Menu → Advanced→ Digital → Channel Type Button

JF TECH	Record	Event	System	Advanced	Info
🖽 Storage			1-2-2000		
Account					
P, Online User					
⊕ Import/Export					
1 Upgrade					
🖂 AutoMaintain					
C Restore	Digital cl	hannels	Channel status	Cha	nnelType
Digital					

2. You can modify the channel mode icon in the red mark the place \rightarrow Click OK button

Local			IP		
4K 5M 3M		5M	4K		
	8				
] 8					
	8		8		
] 4	·			4	
] .	·	1		8	
1 .		8	:		
1 .			4		
ayback chann aximum numb	el: 4 er of preview:	16			
ayback chann Iximum numb	el: 4 er of preview:	16	A2		
ayback chann	el: 4 er of preview:	16	A2 A3		
ayback chann	el: 4 er of preview: A1	16	A2 A3 A4		

3. Reboot System Now and Finished.

D/A Conversion

- 1. Function: Custom channel type by user
- 2. Support model : H265 ADVR
- 3. Usage

Digital > ChannelType								
Local			I	Р				
	4K 5M 3M		5	M	4K			
	. 8 .							
	8					•		
빌	:	8		•	:	8	:	
님	4	•		•			4	
님	•	•					8	
님		•		8			•	
						4	•	
C	ustom (_4		8	A2]		
A1			A3					
					A4			
	D1	A7		A6	A5			
							OK Cancel	

Such as the below picture shown, you could change the analog channel type A8 to digital channel type: Click the icon in A8,

				- /				
A1			A2					A2
			A3		A1			A3
			A4					A4
A8	Α7	A6	A5		D1	A7	A6	A5

you can switch the digital type(D1) to analog type, click 💿 in D1,



- 4. Note:
- A means Analog(Local mode), D means Digital (IP mode)
- Most models' local mode can support D/A conversion function, please refer to the specific model.

