
Snapshot Conf.

Including Cycle capture, Timing capture, Alarm capture.

***Note:** It can only support in Analog channel type. There are three modes can be chosen: Cycle capture, Timing capture and Stop.

0	Capture time	Delete	EMAIL	FTP	storage

Snapshot storage

【Channel】 Select the related channel to set, click "all" to set all channels.

【Cycle capture】 When you open the cycle capture function, there are three options can be chosen: Email, FTP and storage. After selecting, you can set the time period of capture. For example, if you set Email for 32 seconds, you will receive a picture every 32 seconds in your Email. And if you set storage for 32 seconds, it will have a picture every 32 seconds in the HDD.

【Timing capture】 After opening the timed capture function, there are three options can be chosen: Email, FTP and storage. After selecting, you can set the capture time you want to capture. Then, you will receive a picture in the set time.

Note: Email: If you want DVR to capture normally, you need to set Email function in Net Service.

FTP: If you want DVR to capture normally, you need to set up FTP function in Net Service.

Storage: If you want DVR to capture normally, you need to have at least one snapshot disk. You can set snapshot disk in HDD info.

【Alarm Capture】 You can set Alarm capture in Alarm Events: Motion Detect, Video Blind and so on. After setting alarm capture in alarm events, you can receive capture when it happen alarm events.



JF TECH